


This is the front- and back panel in 1:1 scale, which can also be used as a drill template.

Print this onto an opaque white, self-adhesive plastic film and coat the film with a thin layer of transparent laquer to protect the black color against finger prints. Then cut it out and glue the film correctly centered to the aluminium panel.

If you want to use a transparent film instead you have to spray the aluminium panel in white color prior to glueing the film.

Finally a white frame has to enclose the black part all around the panel.

This page is intended to be printed in A3 format. Use the alternative A4 file in case your printer has only A4 capability.

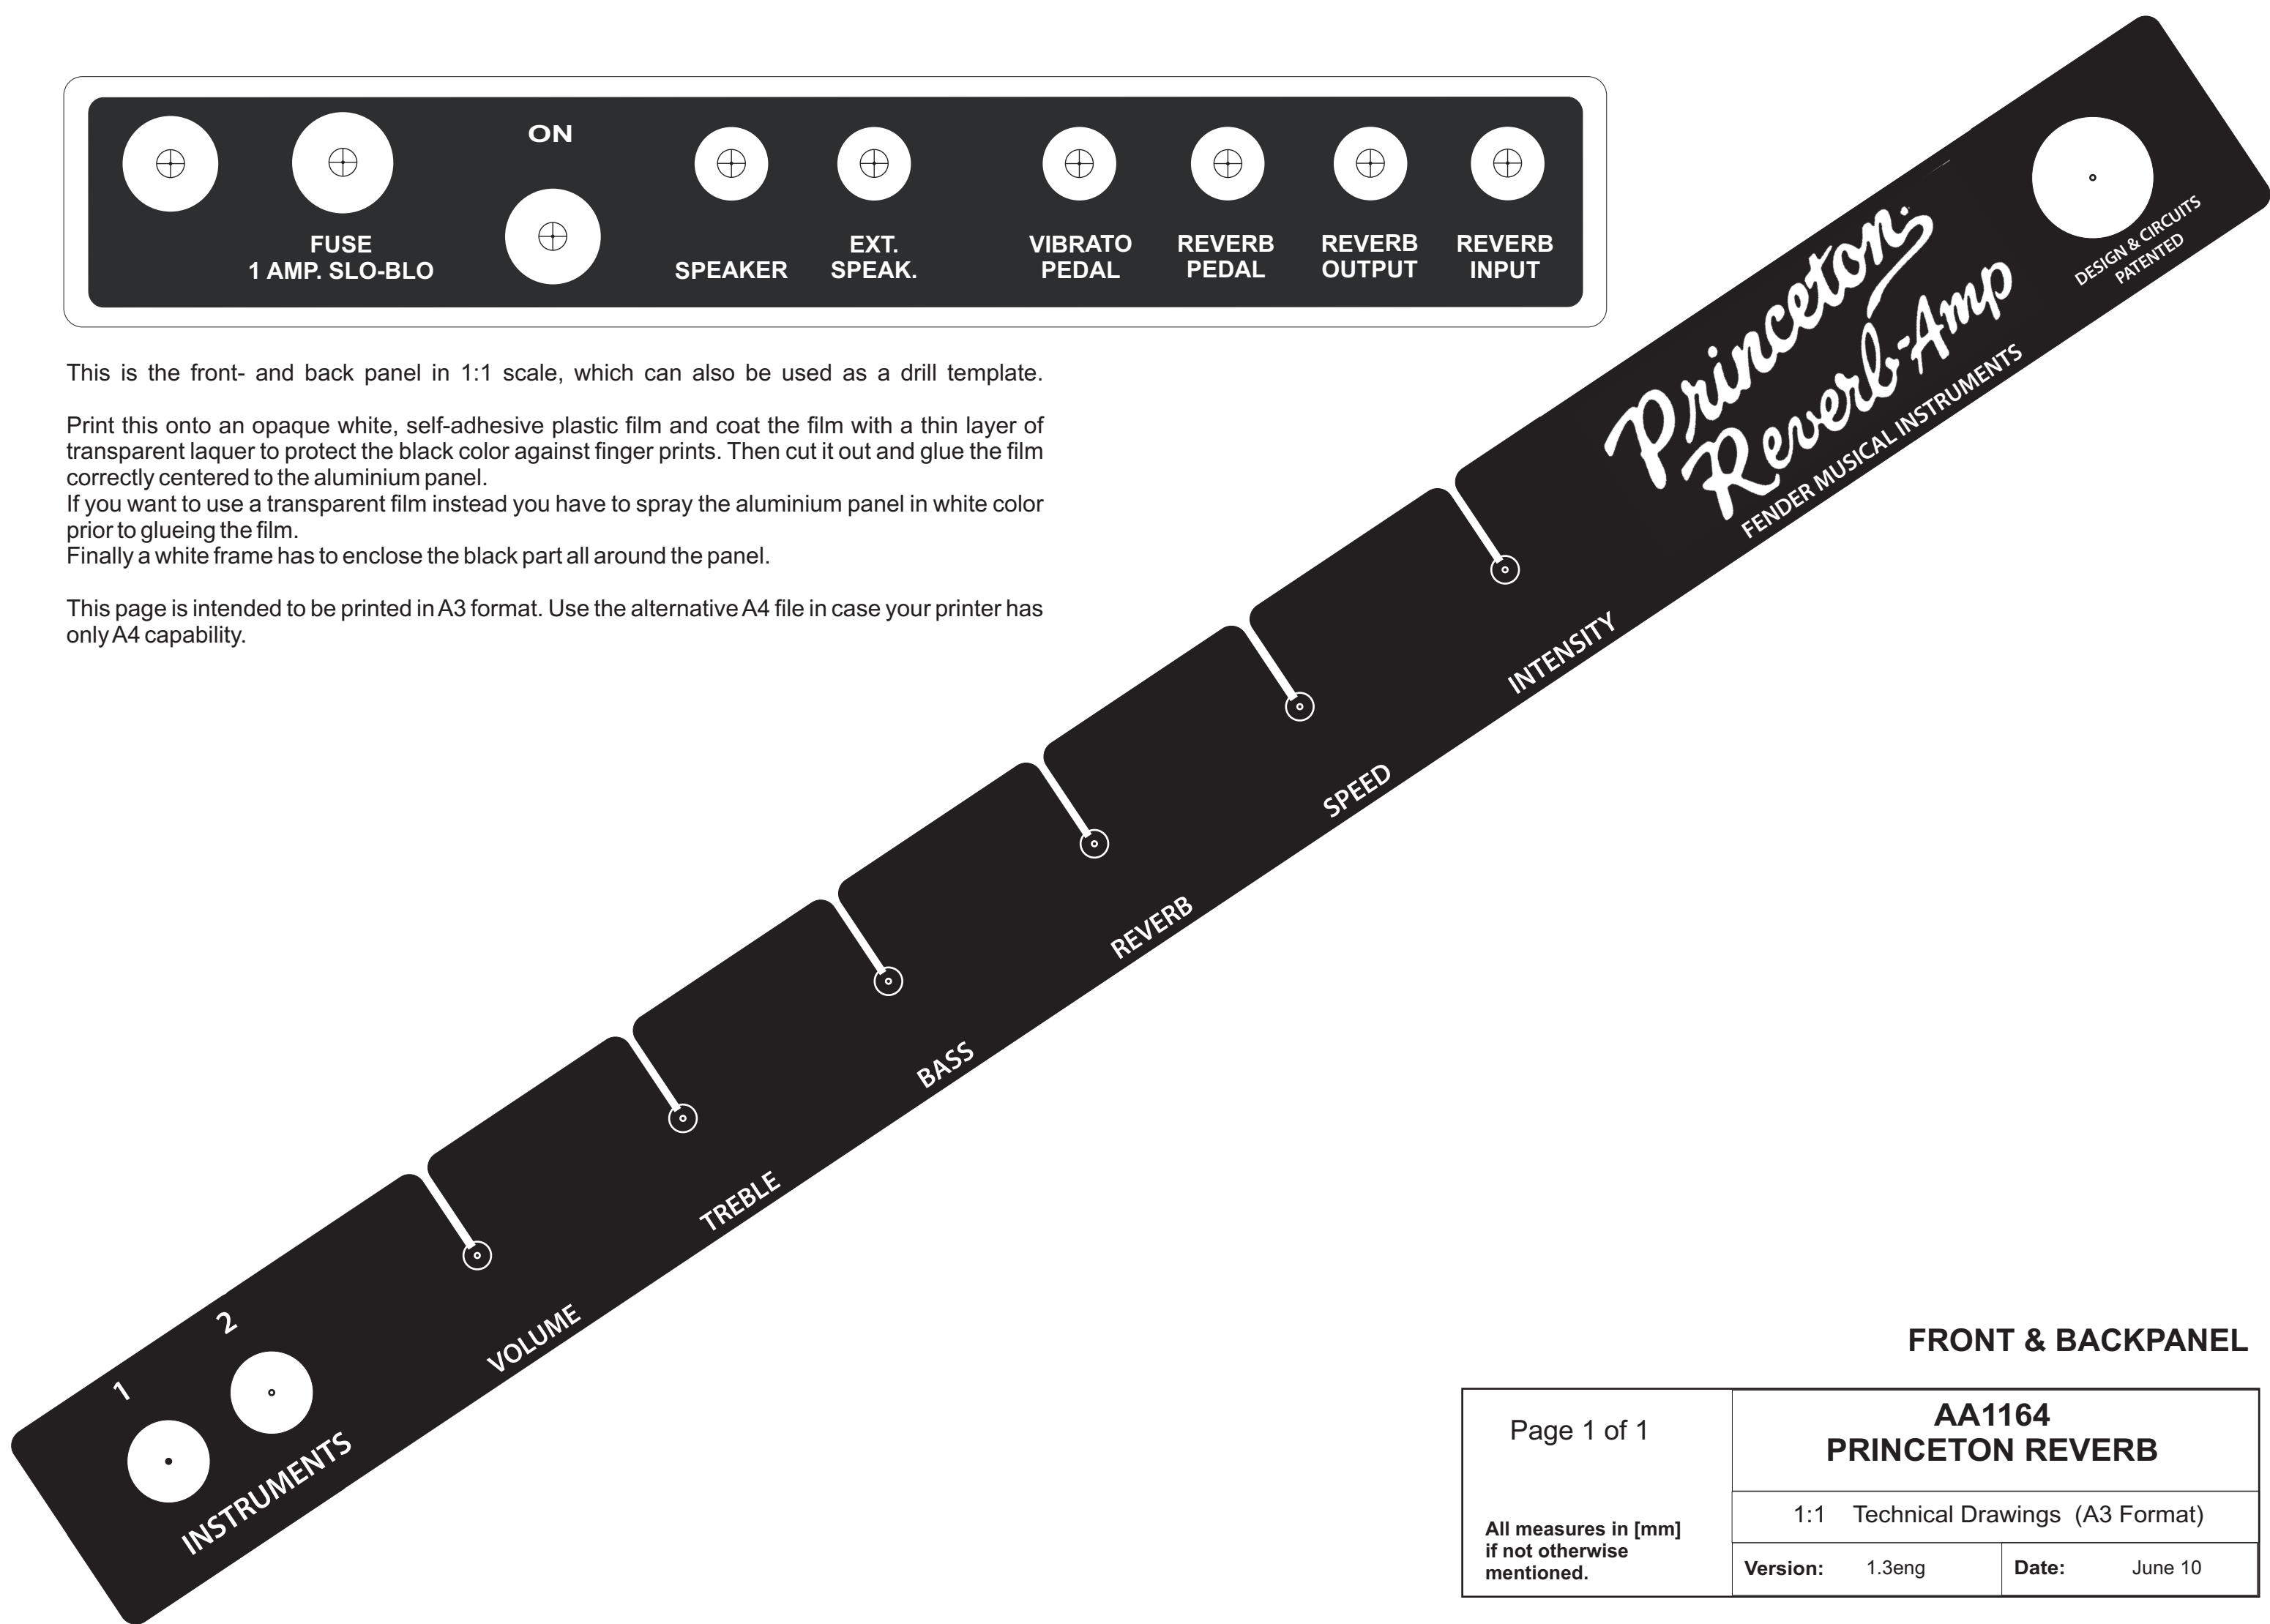

## FRONT & BACKPANEL

Page 1 of 1	<b>AA1164 PRINCETON REVERB</b>	
All measures in [mm] if not otherwise mentioned.	1:1 Technical Drawings (A3 Format)	
	<b>Version:</b> 1.3eng	<b>Date:</b> June 10