

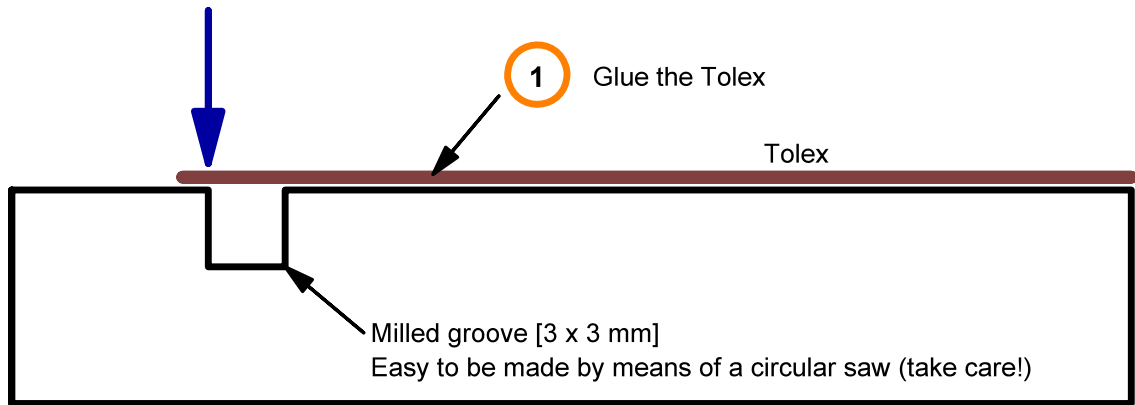


Inserting A Piping Line

2 Cut this way with a cutter knife

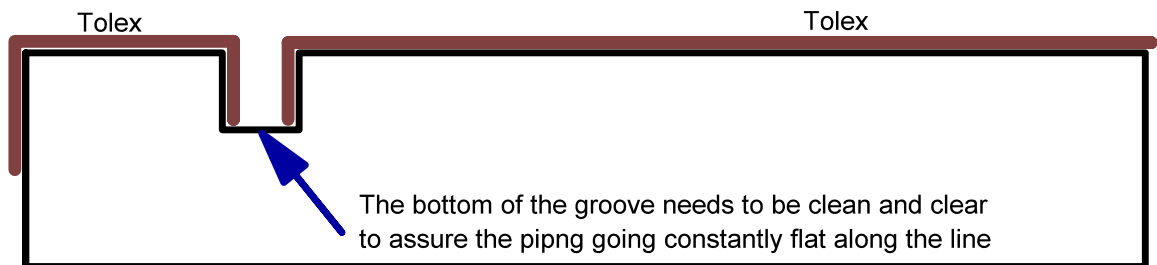

4 Place 2nd piece of Tolex here to joint fold in into the groove and glue.

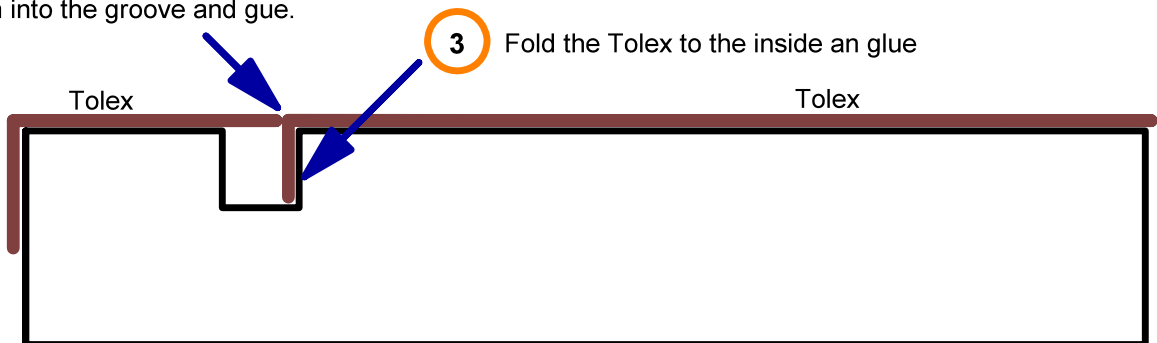

5 Mould the piping into the groove

