

A

B

C

D


E

F

1

TOLEXING WITH OVERLAP METHOD Here for a headshell

20mm

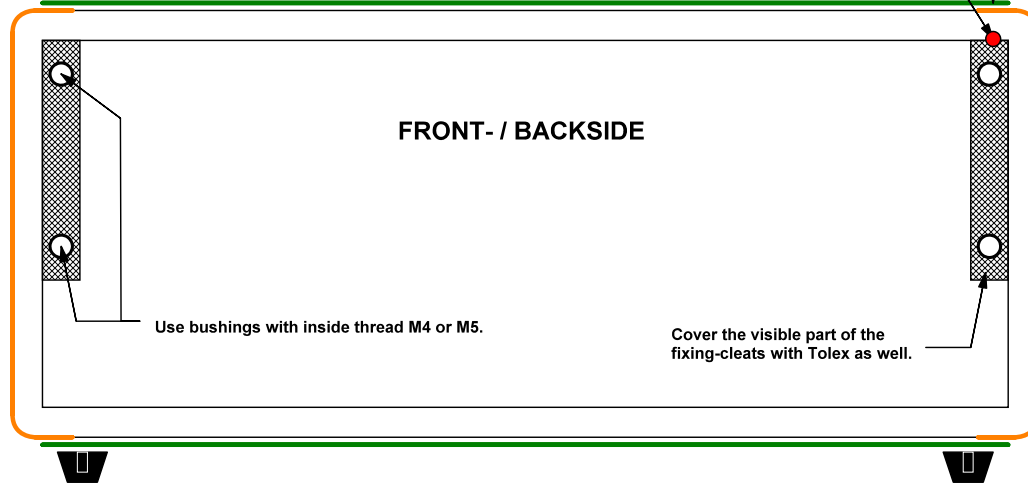

FRONT- / BACKSIDE


Use bushings with inside thread M4 or M5.

Cover the visible part of the fixing-cleats with Tolex as well.

Glue the Tolex as shown in the picture.
Tolex glued to the sides is in orange color,
Top and bottom are in green.

Chassis Straps (if applicable)
will be placed here.

Take care that there is always only one
layer of tolex when you flip it along the inner edges.
Cut the Tolex accordingly. Only the bottom and top
Tolex will completely flip around the edges.

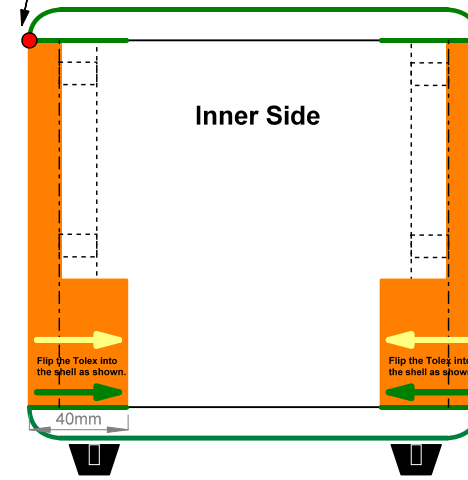

Inner Side

Flip the Tolex into
the shell as shown.

Flip the Tolex into
the shell as shown.

40mm

— Tolex for the sides

— Tolex for top and bottom

3

4

Änderungen		Datum	Name	Bezeichnung:	Blattzahl:
Datum	Name	gez.:		Tolex-Cut for a Headshell	1
		gepr.:			Blatt-Nr.:
				Zeichnungs-Nr.:	1